



## Installation Instructions for All Basepump Models: with -AVB

When assembled, pump looks like this →

**Important: Read all instructions before installation.**  
**\*\* Hang instructions near unit for future reference. \*\***

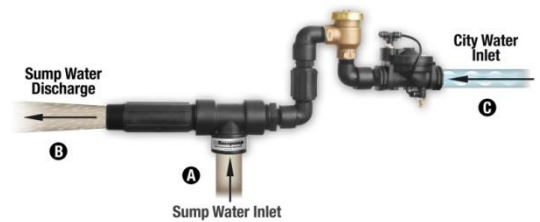

### Typical Installation Ejector Assembly

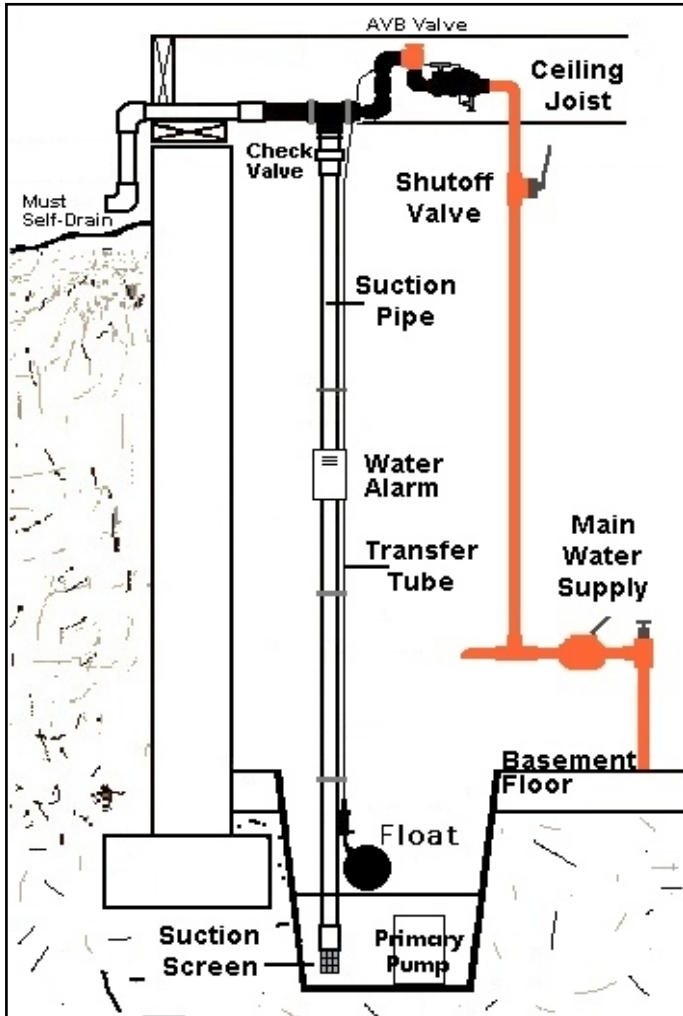

Connect the two sections of the AVB Valve together so the Ejector looks like the picture above.

#### **VERY IMPORTANT!**

1. Do not connect the discharge to the main pump discharge. It must be piped separately to the outdoors.
2. Discharge pipe **MUST** be flat or pitch slightly downward to the exterior so it will self-drain outside when pump stops.


**If you ignore #1 or #2**, water will flow back toward the pump and spill from the AVB unit onto your basement floor.  
**If your application does not allow for this type of installation, please do not use the AVB Unit.**

The rest of the instructions are found in the complete booklet included with the pump model you purchased. The sketches below are for reference to show what the pump looks like when installed with the AVB unit in place.


When mounting the Ejector onto the side of the joist, it may be necessary to use a small block of wood, 1/2" to 3/4" thick behind the provided clamp at the Ejector

main control valve to keep it even on the joist.

#### Step 1. Mount Ejector on Joist

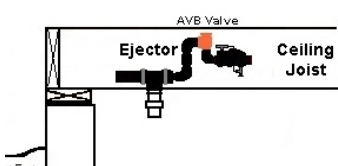

#### Step 2. Install Discharge

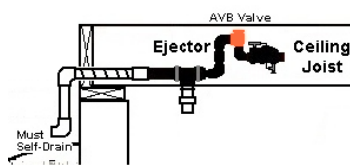

#### Step 3. Install Suction Pipe

